


Monitoring

- 3x230V

Slechts 2 fasen worden gemeten

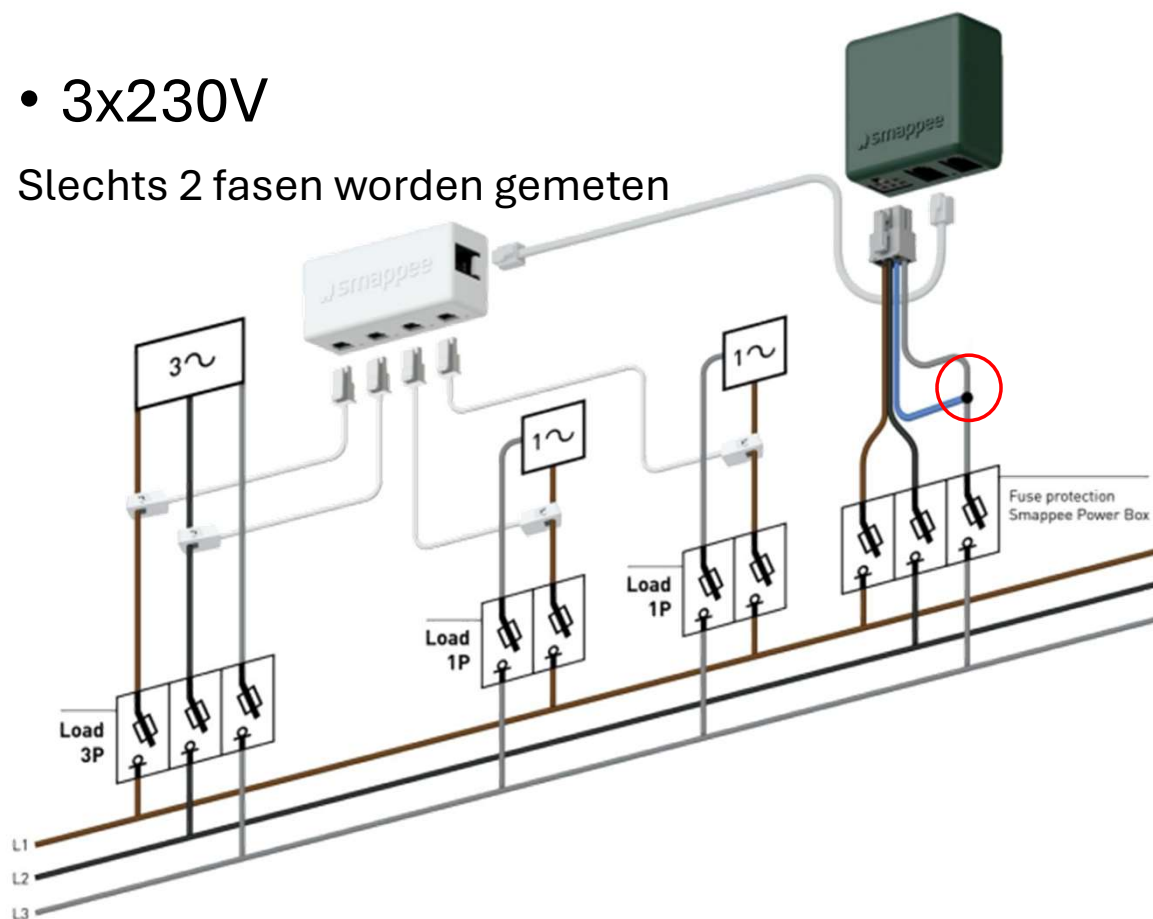

For single phase loads, connect and configure the clamp as follows:

Single phase load powered by	Connect the clamp around	Phase measured by this CT
L1 and L3	L1	L1
L2 and L3	L2	L2
L1 and L2	L1	L3

Controle door zuiver ohmse last in te schakelen (haardroger). Dan moet het verbruik op de app perfect mee stijgen.